


van der stahl

SCIENTIFIC

Peel Tests

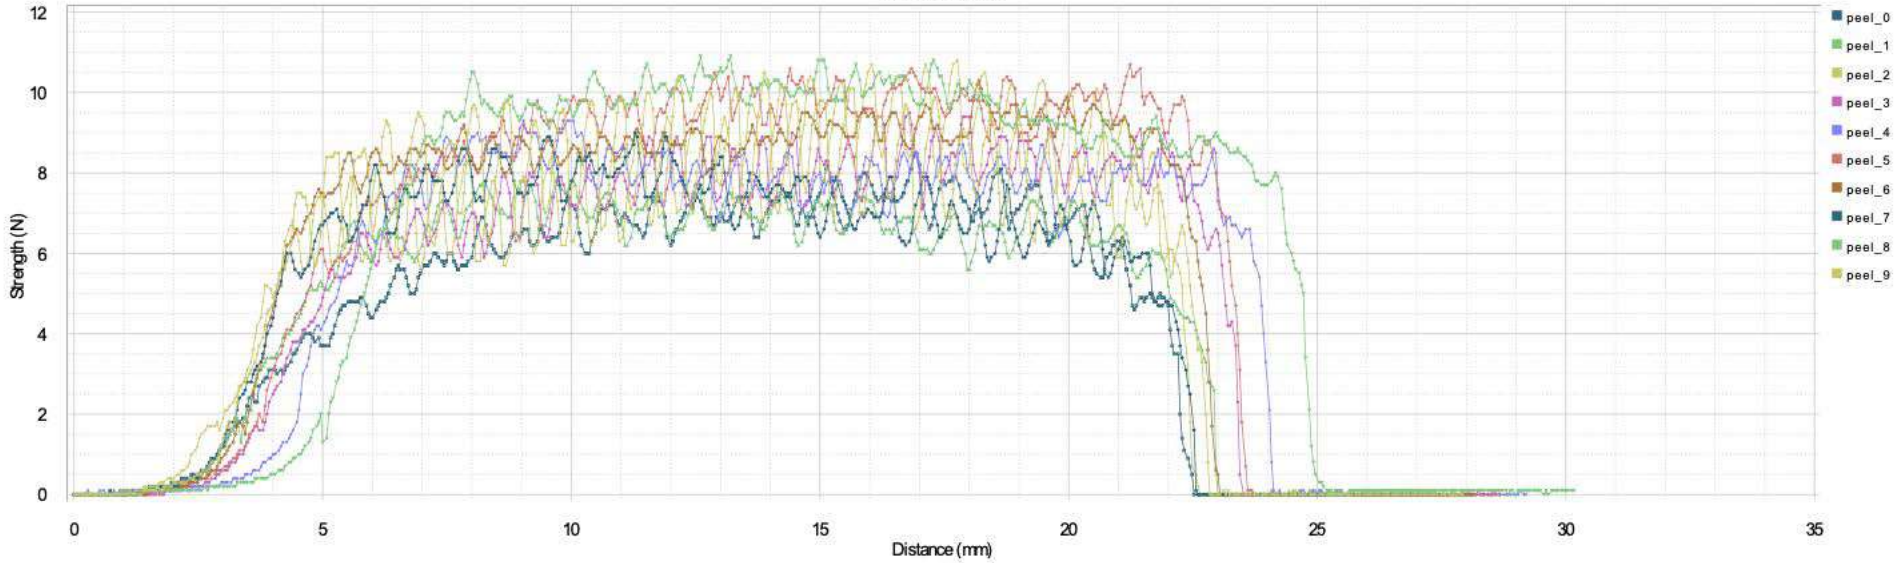

Customer Information

Customer Van der Stahl Scientific, Inc.
Lab Technician Sarah Deputy

Sealer Information

Sealer MS-350-NP
Serial No. B4200117/04981G
Temp 250 F
Heat Dwell 2.0 s
Cool Dwell/Temp 150 F
Cycle Dwell 3.0 s

PTT-100V Package Testing Unit

Model Name PTT-100V
Serial Number B7240078/096002F

peel

Max. Strength	Avg. Strength	Unit	Speed	Test Grip Position	personnel	Date	Serial Number	Lot No.	Error No.
1.91	1.46	lbf	11.8in./min.	0.4in.	OPERATOR	10/22/2018 9:58 AM	06182014-0000011/096002C	000000000	0
1.78	1.51	lbf	11.8in./min.	0.4in.	OPERATOR	10/22/2018 9:59 AM	06182014-0000011/096002C	000000000	0
2.43	1.82	lbf	11.8in./min.	0.4in.	OPERATOR	10/22/2018 10:00 AM	06182014-0000011/096002C	000000000	0
2.14	1.71	lbf	11.8in./min.	0.4in.	OPERATOR	10/22/2018 10:02 AM	06182014-0000011/096002C	000000000	0
2.09	1.78	lbf	11.8in./min.	0.4in.	OPERATOR	10/22/2018 10:03 AM	06182014-0000011/096002C	000000000	0
2.41	2.07	lbf	11.8in./min.	0.4in.	OPERATOR	10/22/2018 10:03 AM	06182014-0000011/096002C	000000000	0
2.32	1.98	lbf	11.8in./min.	0.4in.	OPERATOR	10/22/2018 10:05 AM	06182014-0000011/096002C	000000000	0
2.02	1.64	lbf	11.8in./min.	0.4in.	OPERATOR	10/22/2018 10:06 AM	06182014-0000011/096002C	000000000	0
2.45	2.14	lbf	11.8in./min.	0.4in.	OPERATOR	10/22/2018 10:07 AM	06182014-0000011/096002C	000000000	0
2.36	1.84	lbf	11.8in./min.	0.4in.	OPERATOR	10/22/2018 10:08 AM	06182014-0000011/096002C	000000000	0